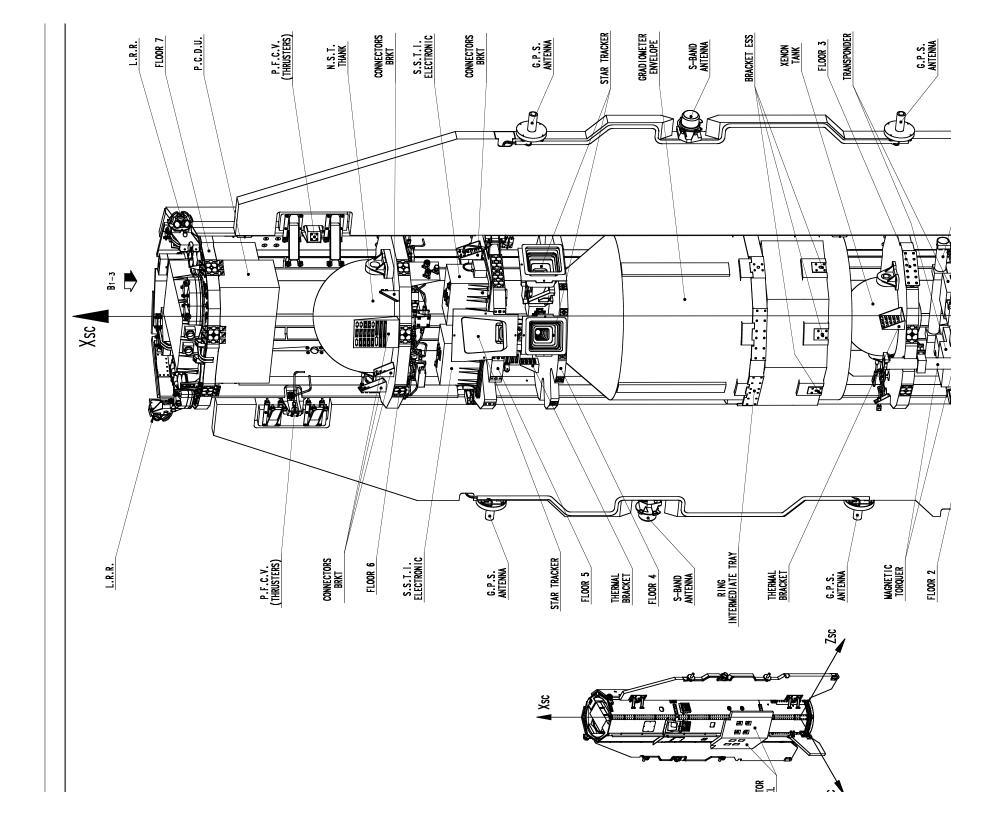
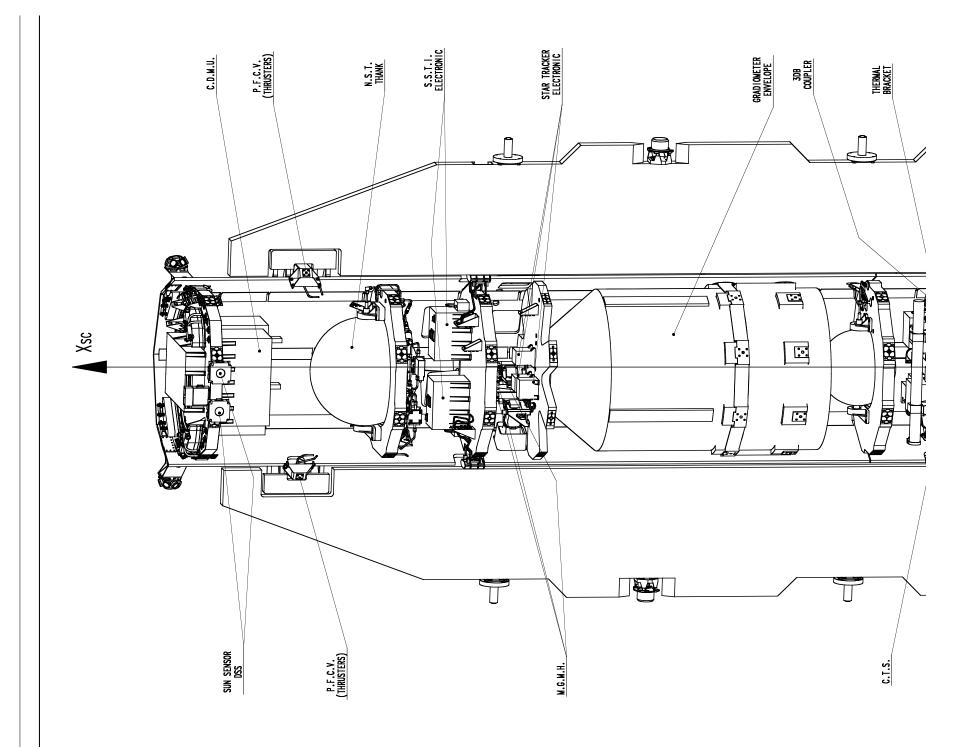
07/09/2004


LIST OF DRAWING DEDICATED TO GOCE S/L CONFIGURATION AND INTERFACES.


```
FIGURE 1 "GOCE S/L OVERALL CONFIGURATION" Sheet 1 of 3
FIGURE 2 "GOCE S/L OVERALL CONFIGURATION" Sheet 2 of 3
FIGURE 3 "GOCE S/L OVERALL CONFIGURATION" Sheet 3 of 3
FIGURE 4 "GOCE S/L COORDINATE SYSTEM"
FIGURE 5 " GOCE LAUNCHER MECHANICAL I/F AND S/L
OVERALL NOMINAL DIMENSION"
FIGURE 6 "GOCE S/L CRITICAL DIMENSIONS W.R.T.
EUROCKOT FAIRING ENVELOPE"
FIGURE 7 "GOCE S/L LVA RING DIMENSION" (CASA DRAWING)
FIGURE 8 "GOCE S/L UMBILICAL CONNECTORS POSITION AND
MECHANICAL I/F"
FIGURE 9 "GOCE ACCOMMODATION WITHIN EUROCKOT"
Sheet 1 of 2 (*)
FIGURE 10 "GOCE ACCOMMODATION WITHIN EUROCKOT"
Sheet 2 of 2 (*)
```


Note (*) : These two Drawings are inserted as reference only because the Accommodation of GOCE within EUROCKOT is under Launcher Authority Responsibility.






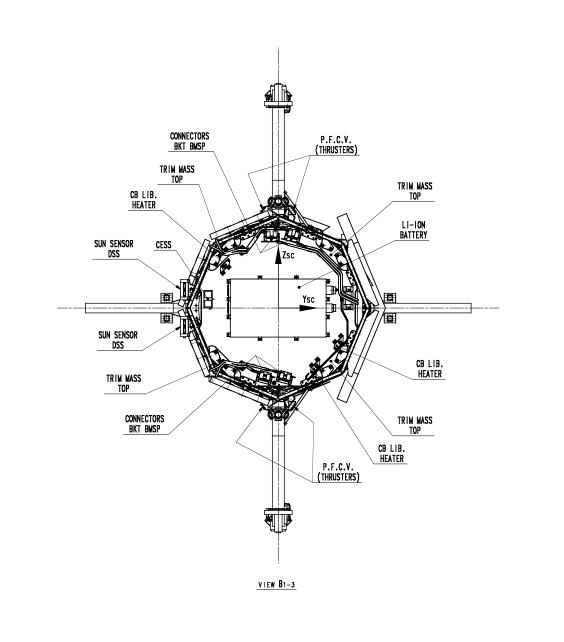

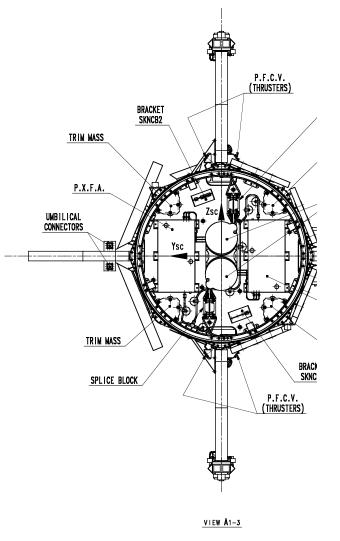

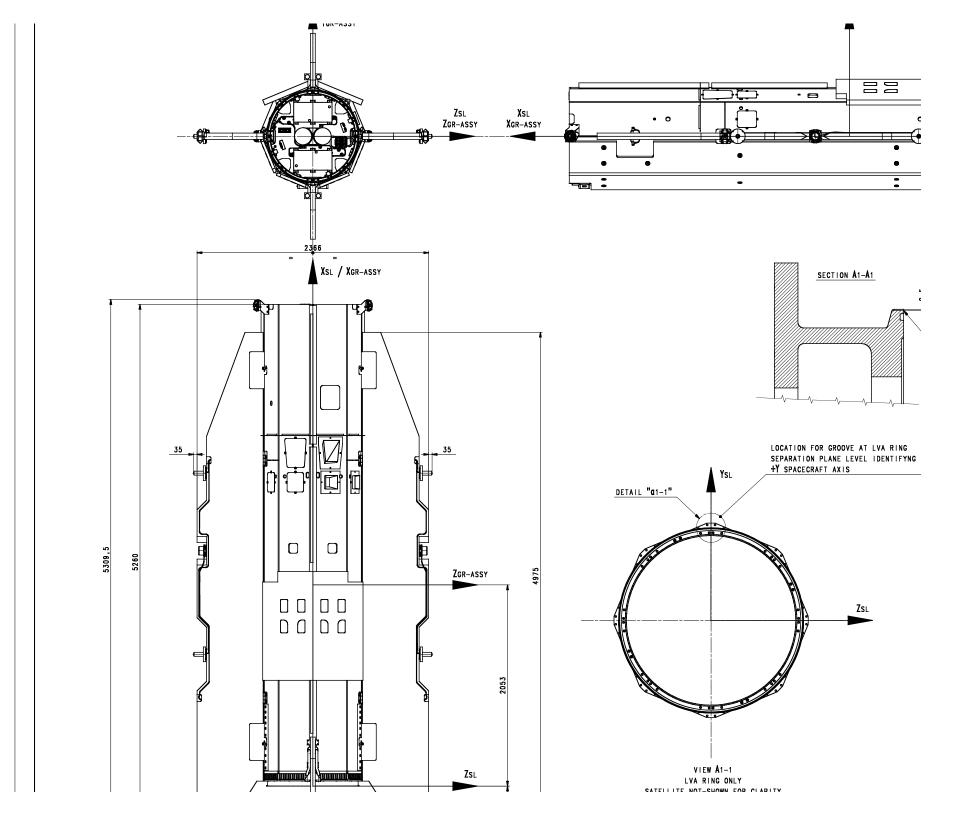

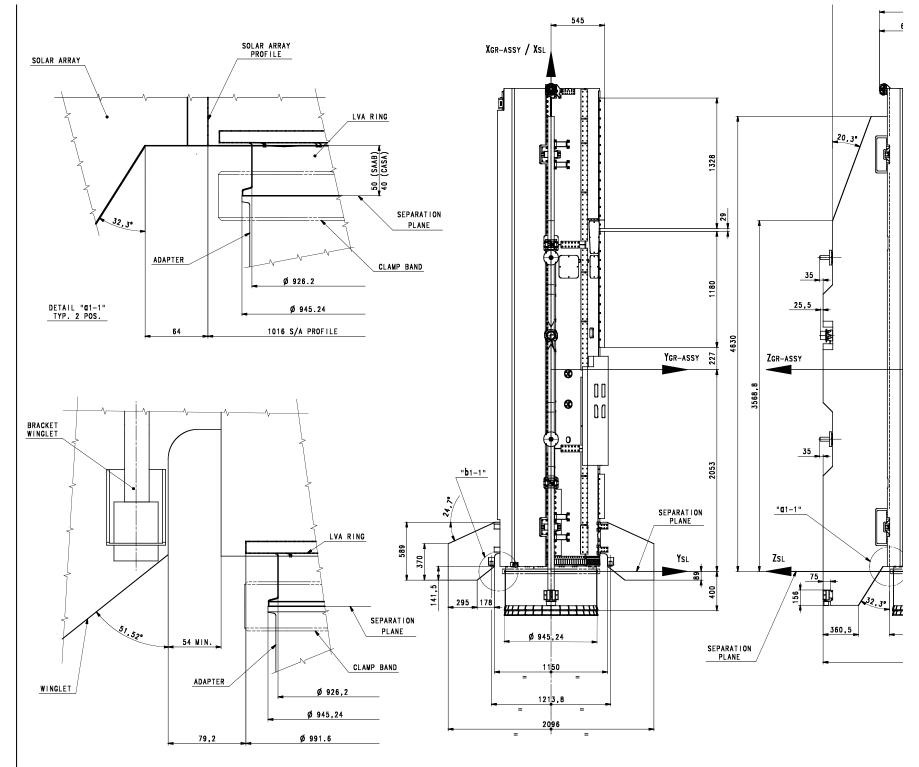

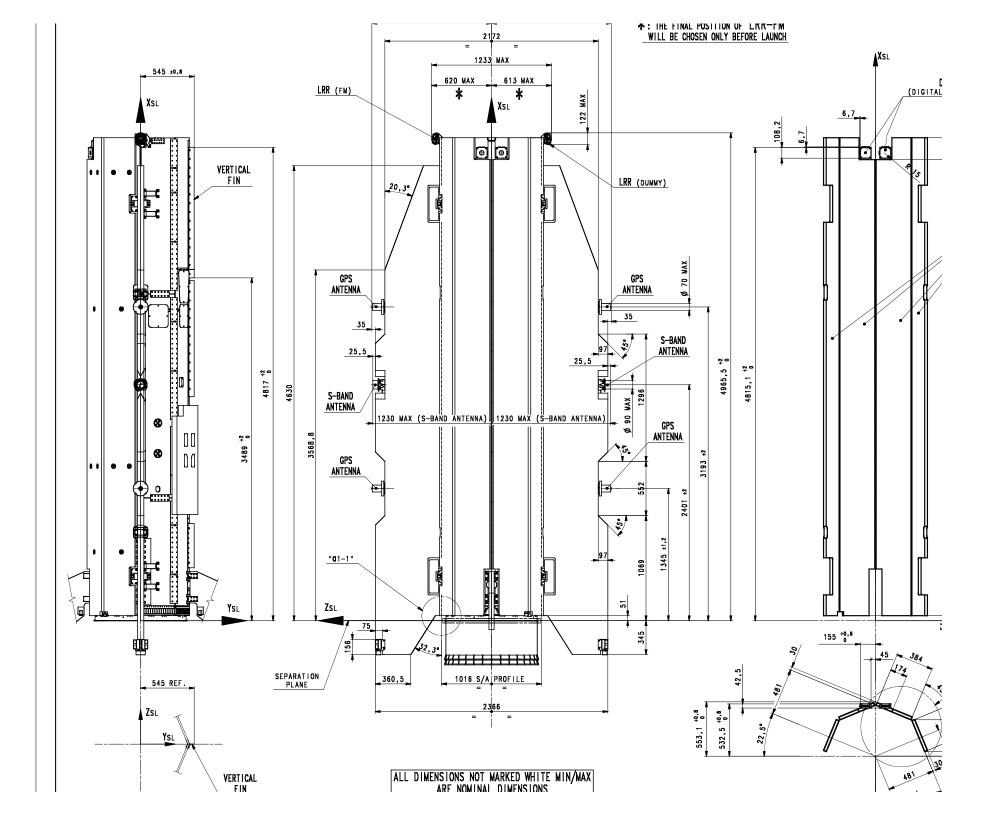


FIGURE 7 "GOCE S/L LVA RING DIMENSION" (CASA DRAWING)

